

Portable billboard in less than 5 minutes.

Impress customers with a high impact Expandable pop-up display. This economical and lightweight display has an interchangeable fabric graphic that collapses down with the frame and fits within a duffel size bag.

Quick & Easy Set-up

The wrinkle resistant fabric graphic stays attached to the frame, so it takes less than five minutes to set up.

Quality Workmanship

The wrinkle resistant fabric graphic stays attached to the frame, so it takes less than five minutes to set up.

Replaceable Graphic

New graphics are easily attached to your existing frame. Simply remove the existing one and Velcro on a new graphic.

Portable

The entire display collapses into a durable nylon carrying bag for convenient storage and mobility. For added protection and ease an optional rolling hard case is available.



Podium Hard Case

Travel Bag

Item	HW	Graphic
31x88x12 Flat	\$285	\$235
60x60x12 Flat	\$376	\$360
60x88x12 Flat	\$398	\$528
88x60x12 Flat	\$398	\$528
91x88x12 Curve	\$514	\$714
88x88x12 Flat	\$514	\$774
114x88x12 Curve	\$610	\$942
117x88x12 Flat	\$610	\$1,030
117x117x12 Flat	\$684	\$1,370
147x88x12 Flat	\$782	\$1,285
Hard Case with Black Sintra Top	\$280	
Printer Fabric Case Cover	\$264	
Light Package	\$147	

1.800.655.7311

 
From outside of U.S. (1) 802-488-8789

472 Meadowland Drive Unit #5
 South Burlington VT 05403
sales@projectgraphics.com
www.projectgraphics.com

"Easy to use" instructions for your Expandable display



1 Remove frame and graphic from nylon bag.

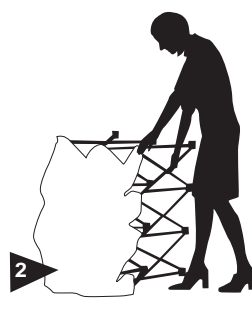


2 Ensure "adjustable feet" of frame are on the floor. Pull up display into upright position.



3 Lock all hooks between front and back hubs.



 4 Adjust leveling feet for desired angle. OneFabric display can now easily be moved into position.

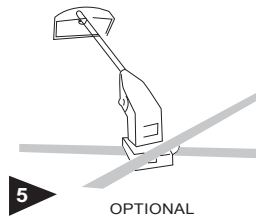


5 **OPTIONAL**
Attach lights to top of frame by sliding the plastic "x blocks" under the frames cross section.


Warning:

To avoid damage, separate end caps and disconnect ALL hooks before collapsing the frame.

 
How to install or replace graphics on your OneFabric:

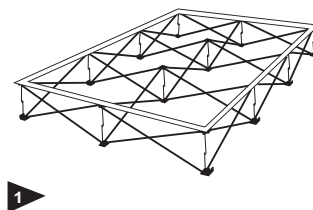

 
1 Assemble frame and lay flat on its back. Pull up display into upright position.

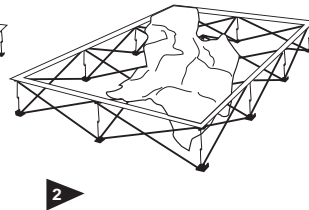

 2 Starting at one corner, attach velcro loop (on the graphic) to the velcro hook (on the frame). NOTE: Velcro on the graphic should extend 1/4" to 1/2" beyond velcro on the frame (it should not be

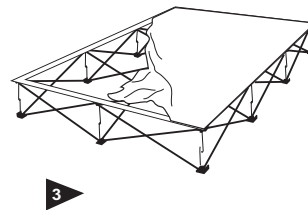

 3 Working in a continuous direction around the frame, attach the rest of the graphic. Make sure the graphic is pulled taut while attaching the velcro.

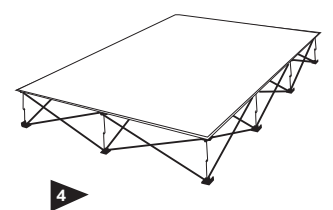

4 If needed, make adjustments to the velcro where needed.

1.800.655.7311

From outside of U.S. (1) 802-488-8789

472 Meadowland Drive Unit #5
South Burlington VT 05403
sales@projectgraphics.com
www.projectgraphics.com